Bauknecht

Instructions for use

MCCD 4920
MCCL 4720

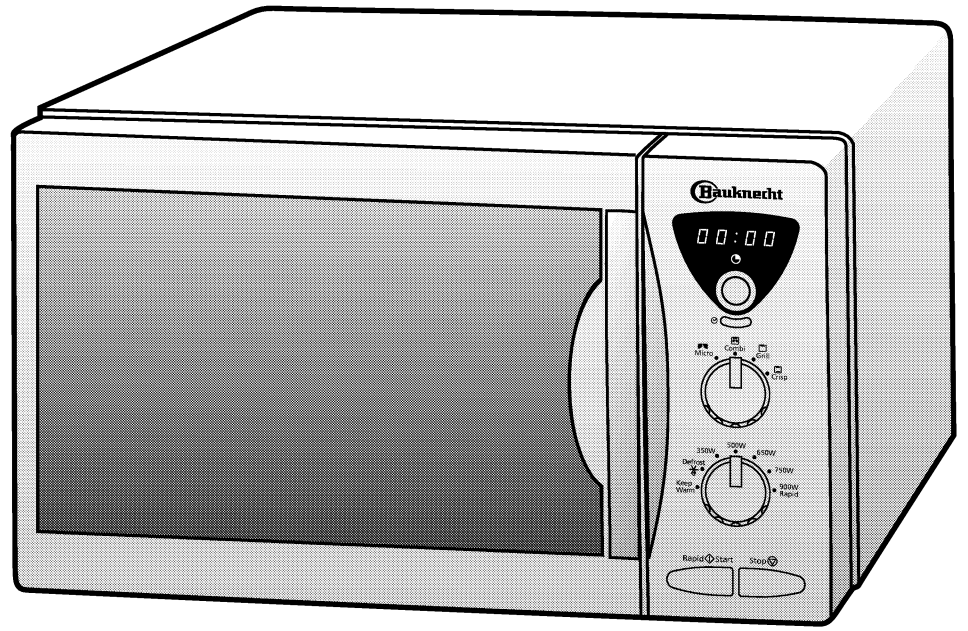

4619 694 19211

GB

Whirlpool Sweden AB

Content

GB

	Page
Electrical connection	1
Before you operate the oven	1
Control panel	2
Symbol description	2
Oven overview	2
Important when using your microwave oven	3
Child safety / empty oven start protection	4
Accessories	4
Optional clock display	5
Cooking interruption	6
Time and power	6
Defrost function	7
How to choose power level	7
Grill function	7
Grill in combination with microwaves	8
Crisp function	9
Maintenance	10
Service	10
Data for test heating performance	11
Technical specifications	11

Electrical connection

Prior to connecting, check that the voltage on the rating plate corresponds to the voltage in your home.

The earthing of this appliance is compulsory by law. The manufacturer will accept no responsibility for injury to persons or damage to objects arising from the non-observance of this requirement.

⚠ WARNING!

THIS APPLIANCE MUST BE EARTHED! ⏚

Before you operate the oven

Please read the instructions and guarantee information and keep for future reference.

Please complete the guarantee card and send to our Service Department.

Make sure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean inside it with a soft, damp cloth.

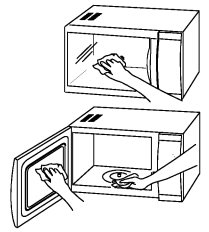

Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. The control side of the unit is the heavy side. Use care when handling.

Place the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 10 cm above the oven.

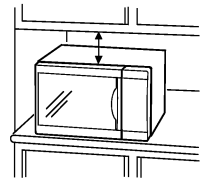

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results. Make sure the microwave oven feet are in place and ensure the space underneath the oven is empty to ensure proper airflow.

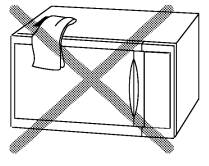

The oven can be operated only if the oven door is firmly closed.

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

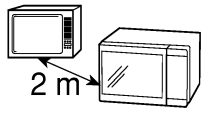

The packaging material is recyclable and marked with the symbol for recycling ♺.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Electrical shock, fire or other hazards may result.

Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.

Do not let the mains cord hang over edge of table or counter.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

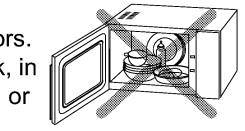

Do not use the cavity for storage purposes. **Do not leave** paper products, cooking utensils, or food in the cavity when not in use.

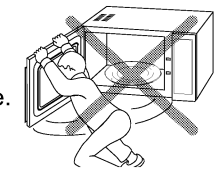

Never lean on the door or allow a child to swing on it when the door is open. Injury could result.

⚠ WARNING!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.
If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

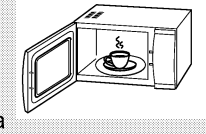

Control panel

Digital display. This display includes a 24 hour clock or displays the cooking time.

Timer knob. Use this knob to set the cooking time or time of day.

Multifunction knob. Use this knob to select the desired function

Power knob. Turn this knob to set the desired microwave power level.

Start button. Press this button to automatically start with the cooking time set to 30 seconds. Each additional press increases the cooking time by 30 seconds.

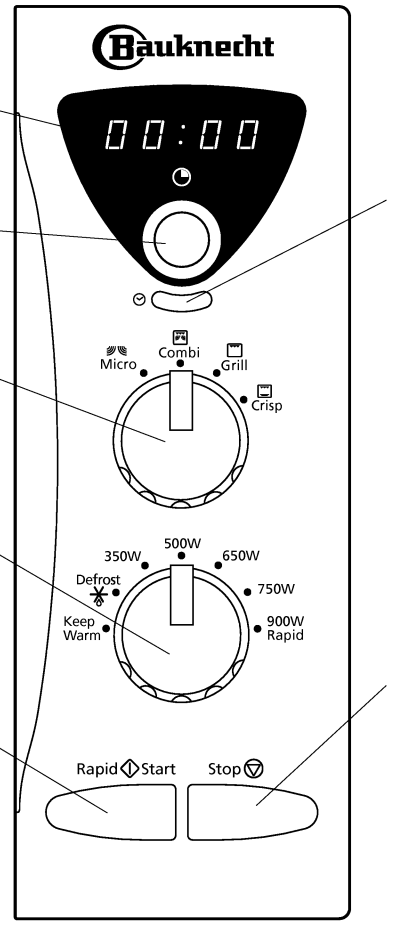

Clock button. Use this button to select the 24 hour clock and set the time of day or the time resolution of the cooking clock.

Stop button. Use this button to stop or reset any of the oven functions.

Symbol description

Cooking time symbol

Microwave + Grill symbol

Crisp symbol

Acoustic signal

Microwave symbol

Grill symbol

Defrost symbol

Start symbol

Stop symbol

Oven overview

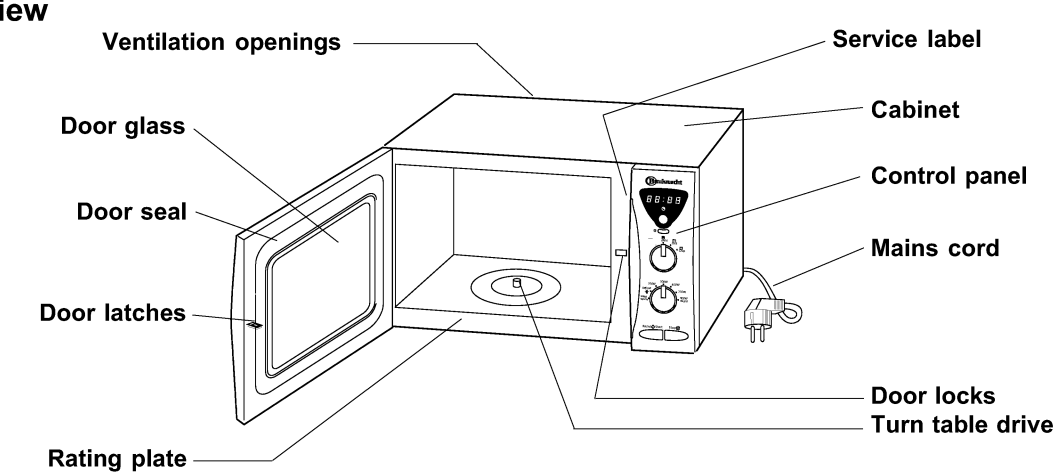

Data for test of heating performance

in accordance with IEC 705.
The International Electrotechnical Commission, SC 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

MCCD 4920 / MCCL 4720				
Test	**Amount**	**Approx. time**	**Power level**	**Container**
A	750 g	9 min	750 W	Pyrex 3.220
B	475 g	5 min	750 W	Pyrex 3.827.80
C	900 g	15 min	750 W	Pyrex 3.838.80
Defrosting, minced meat	500 g	14 min	160 W	Pyrex 3.838.80 Place on a plastic plate

Technical specifications

Type number	**MCCD 4920 MCCL 4720**
Supply voltage for UK	230-240 V/50 Hz
Supply voltage for other countries	230 V/50 Hz
Power consumption	2300 W
Fuse for UK	13 A
Fuse for other countries	10 A
Microwave power (acc. to IEC705. 1000 g water)	
Rapid (Full power)	900 W
	750 W
	650 W
	500 W
	350 W
Defrost	160 W
Keep warm	90 W
Grill Power	1000 W
Microwave power, Grill + Microwaves	650 W
	500 W
	350 W
	160 W
	90 W
Timer	Electronical
Dimensions:	**HxWxD**
Outer dimensions:	277x535x338
Oven compartment:	200x340x290 20 L

Maintenance

Your VIP microwave oven has a stainless steel interior. Unlike the painted steel interiors found in most other microwave ovens, the surface will not chip, rust or corrode.



Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

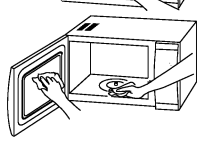

Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.

At regular intervals, especially if spillovers have occurred, remove the turn-table, the turn-table support and wipe clean the base of the oven.
This oven is designed to operate with the turn-table in place. **Do not** operate the microwave oven when the turn-table is removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn soil, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the soil.

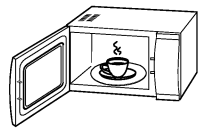

Odours inside the oven can be eliminated by placing a cup of water with lemon juice added into the oven and boiling the mixture.

The Grill element does not need cleaning since it becomes so hot that the soil is burned off but the ceiling beneath it may need regular cleaning. Clean with warm, detergent water and a sponge.

⚠ WARNING!

The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.
Abrasive cleansers, steel-wool pads, gritty wash cloths, etc., can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.
Do not spray directly on the oven.

Service

If the oven does not work, do not make a service call until you have made the following checks:

* The Turn-table and turn-table support is in place.
* The Plug is properly inserted in the wall socket.
* The Door is properly closed.
* Check your Fuses and make sure that there is power available.
* Wait for ten minutes and then try to operate the oven once more.

This is to avoid unnecessary calls for which you will be charged.
When calling for Service, please give the serial number and type number of the oven (see Service label).

Important:
If the mains cord needs replacing it should be replaced by the original mains cord which is available via our service organisation. The mains cord must only be replaced by a trained service technician.

⚠ WARNING!

Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
Do not remove any cover.

Important when using your microwave oven

Do not heat, store or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

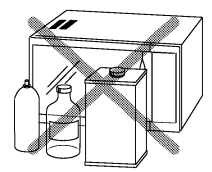

Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode.

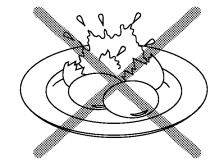

Use this appliance only for its intended use as described in this manual.

Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not over-cook food. Fire could result.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

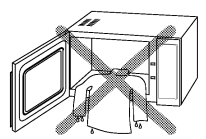

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn, and some plastics can melt if used when heating foods. As with any appliance, close supervision is necessary when used by children.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.

If material inside / outside the oven should ignite, keep oven door closed, turn the oven and fan off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

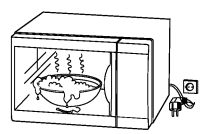

When heating liquids, e.g. beverages or water in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow to stand for a short time, stirring again before carefully removing the container from the oven.

⚠ Warning

Do not use your microwave oven for heating food or liquids in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

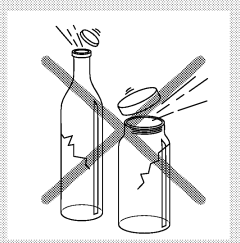

Some foods which has a low water content E.g. oil, chocolate and some pastries with sweet fillings, must be heated carefully.

Do not use your microwave oven for deep frying, because you cannot control the oil temperature.

One of the major advantages of microwave ovens is the short cooking time. Therefore, do not exceed recommended times for cooking or re-heating food.

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.
Ensure the Lid and the Teat is removed before heating!

Use hot pads. Microwave energy does not heat containers, but the hot food does. Heat from the Grill will cause container and oven parts to become hot. Also the Crisp-plate always becomes very hot when used.
Use oven mitts when touching containers, oven parts, and pan after cooking to prevent burns.

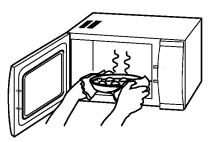

Child safety / empty oven start protection

This oven has an automatic child safety function which is activated one minute after the oven has returned to “stand by“. The oven is in “stand by“ when the 24 hour Clock is displayed, or if the Clock has not been set, when the display is blank.

The door must be opened and closed e.g. putting food into it, before the safety lock is released. If you try to operate the oven without putting food into it the display will display **“door“** indicating that you must open and close the door before operating the oven.

Accessories

⚠ CAUTION!

There are a number of accessories available on the market. Before you buy, make sure they are suitable for microwave use.

When you put food in the microwave oven, make sure that food, food supports or covering do not come in direct contact with any of the internal walls or the ceiling of the cavity.

Turn table support

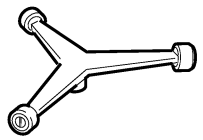

Use the Turn table support under the Glass Turn-table. Never put other utensils than the Glass Turn-table directly on the Turn table support. The Turn table support may be cleaned in dishwashers.

* Fit the Turn table support on its locator in the oven.

Glass turn-table

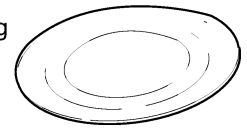

Use the Glass Turn-table with all cooking methods. The Glass Turn-table collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven. The Glass Turn-table may be cleaned in dishwashers.

* Place the Glass Turn-table on the Turn table support.

Grill-grid

Use the Grill-grid to place the food close to the Grill element.
Always place the Grill-grid on the Glass Turn-table for support and collecting the dripping juices. You may damage the oven if you place the Grill-grid directly on the bottom of the oven. Use oven mitts when removing the hot Grill-grid. The Grill-grid may be cleaned in dishwashers.

Two plate stacker

The Two plate stacker is excellent for two level reheating. Simply place one plate on the Glass Turn-table and a second plate on the Two plate stacker above. The Two plate stacker may be cleaned in dishwashers.
Do not use together with the Grill or Crisp. It will melt.

Crisp-plate

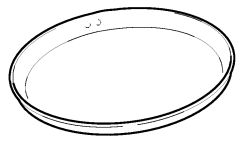

Place the food directly on the Crisp-plate. Always use the Glass Turn-table as support when using the Crisp-plate. The Crisp-plate may be preheated before use. Use oven mitts or the supplied special Crisp handle when removing the hot Crisp-plate. The Crisp-plate can be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser.
Do not use steel-wool pads. They will scratch the surface.

Crisp handle

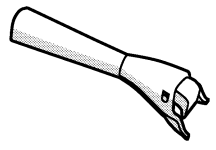

Use the supplied special Crisp handle to remove the hot Crisp plate from the oven. The Crisp handle may be cleaned in dishwashers.

Crisp function

The Crisp-plate will give foods such as pizzas and pies a nice crisp, brown bottom surface. Use this function to refresh and crisp pre-cooked pizzas and other dough based foods. Use it also to fry bacon and eggs, sausages, hamburgers etc.

Always place the Crisp-plate on the Glass turn-table.

Do not place any utensils on the Crisp-plate since it will very soon become very hot and is likely to cause damage to the utensil.

Place foods directly on the Crisp-plate. Brush the Crisp-plate with oil before use. This will make it easier to remove foods from the plate and to clean it after use.

Only use tools made of heat resistant plastic or wood. Metal tools and sharp objects shall not be used, since they will scratch the surface.

The oven is automatically working with Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp your food. The Crisp-plate may be preheated before use.

⚠ CAUTION!

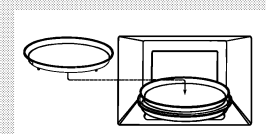

The oven and the crisp-plate becomes very hot when using this function. **Use oven mittens** or **the special Crisp handle** supplied when removing the hot Crisp-plate.
Do not touch the ceiling beneath the Grill element.
Ensure that the Crisp-plate is properly placed in the middle of the Glass Turn-table.

Note:
It is not possible to change or switch on/off the Power level or Grill when using the Crisp function.

User action	Oven reaction
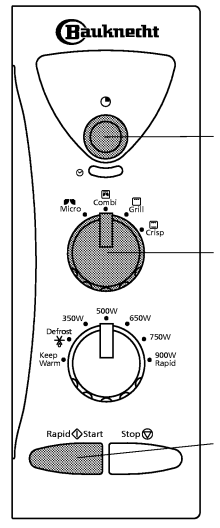 1. Turn the MULTIFUNCTION knob to the Crisp position.	* The display switches to cooking time mode.
2. Turn the TIMER knob until the required time is indicated. For higher / lower timer resolution (timestep) simply press the clock button and turn the timer knob again.	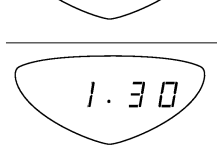 * For times up to 30 min the timestep is 1 second. * For times above 30 min the timestep is 1 minute.
3. Press the START button.	 * The cooking time is displayed counting down * The Cooking process begins. * The Cavity lamp lights up. * The Fan operates.
	When the cooking time has elapsed an acoustic signal sounds and the cooking process is switched off.

Grill in combination with microwaves

By combining Microwaves and Grill you can use the advantages of both cooking methods. At the same time as the Grill is browning the food the Microwaves shortens the cooking time and the result is often better.

The cooking time is often half of the time required in an ordinary oven.

The Grill-grid may be used with the combi function.

You may place vessels or gratins directly on the Glass turntable.

When Combi is used the Power level is automatically limited to maximum 650 W regardless of the variable power knob setting.

How to choose the correct power level	
Power level	**Suitable foods**
90 - 160 W	Roasts
160 - 350 W	Fish
350 - 500 W	Poultry
500 - 650 W	Gratins

Important!
Ensure that the utensils you use are oven proof and allow microwaves to pass through them before Grilling with microwaves combined.

User action	Oven reaction
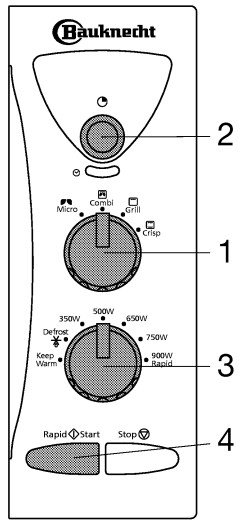	
1. Turn the MULTIFUNCTION knob to select the Combi function.	* The oven switches to cooking time mode.
2. Turn the TIMER knob until the required time is indicated.	 * The cooking time is displayed.
3. Turn the POWER knob to select a desired power level.	
4. Press the START button.	 * The cooking time is displayed counting down.
	When the cooking time has elapsed an acoustic signal sounds and the cooking process is switched off.

Note:
Both Time, Power and function are possible to change during cooking.
You may change cooking method at any time while cooking. Simply turn the Multifunction knob to one of the three functions MICRO, COMBI or GRILL. For instance,you may shut the Grill off and continue the cooking with Microwaves only as soon as the food have reached the apropriate browning color. Simply turn the Multifunction knob to the MICRO position.

You may continue with Grill only if you wish more browning color. Simply turn the Multifunction knob to the GRILL position.
You may return to Combi cooking by simply turning the Multifunction knob to the COMBI position.
Once the cooking process has been started the time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Timer knob to increase or decrease the time.

Optional clock display

When the appliance is first plugged in or after a power failure, the display is blank.
The facility is available, if required, to have a 24 hour digital Clock display. If the Clock function is not programmed into the oven then the display will remain blank until the cooking time is set.

Keep the door open during setting the Clock. This gives you 10 minutes to finish the setting of the Clock.

If the door is kept shut, each step must be accomplished within 30 seconds. If not, the oven returns to “stand by“ and you will have to start again.

User action	Oven reaction
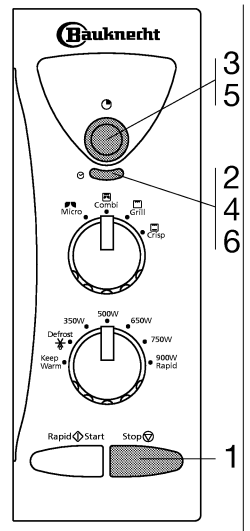	
1. Press the STOP button.	* The two dots are lit.
2. Press the CLOCK button.	 * The two left hand figures (hours) flicker.
3. Turn the TIMER knob to set the hours. Stop when the correct hour has been reached.	 * The set hours will continue to flicker
4. Press the CLOCK button again.	 * The two right hand figures (minutes) flicker.
5. Turn the TIMER knob to set the minutes. Stop when the correct minute has been reached.	 * The set minutes will continue to flicker.
6. Press the CLOCK button again.	 * The Clock operates.

Note:
If you wish to remove the Clock from the display once it has been set, simply press the Clock button again and then press the Stop button. To reinstall the Clock, follow the above procedure.

Cooking interruption

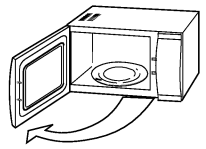

To interrupt the cooking process:
If you wish to check, stir or turn the food just open the door and the cooking process automatically stops. When the door is opened the cooking time and functions remain set for 10 minutes to indicate that the cooking / reheating has been interrupted. If you open the door please consider the following:

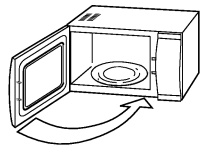

To restart the cooking process:
Close the door and press the START button once.
Note: The cooking process continues from where it was interrupted if the START button is pressed once. Pressing the START button twice also increases the time by 30 seconds.

If you don't want to continue cooking:
Remove the food, close the door and press the STOP button

If you don't interrupt the cooking process:
When the cooking process is finished, the oven will beep once every minute for 10 minutes, unless the door is opened or the STOP button is pressed.
Note: It is possible to change both Time and Power during cooking.

Continued cooking:
When the cooking process is finished, the oven keeps the current settings for 10 minutes unless the STOP button is pressed. This enables you to continue cooking simply by pressing the START button. You may also continue cooking simply by pressing the START button a few times. In this case the oven only increases the time by 30 seconds in each press. All other settings remain the same.
Note: The oven keeps the settings for only 30 seconds if the door is opened and then closed after the cooking is finished.

Time and power

User action	Oven reaction
1. Turn the MULTIFUNCTION knob to select the Microwave function.	* The display switches to cooking time mode.
2. Turn the POWER knob to select a desired Power level.	
3. Turn the TIMER knob until the required time is indicated. For higher / lower timer resolution (timestep) simply press the clock button and turn the timer knob again.	 * For times up to 30 min the timestep is 1 second. * For times above 30 min the timestep is 1 minute.
4. Press the START button.	 * The cooking time is displayed counting down * The Cooking process begins. * The Cavity lamp lights up. * The Fan operates.
	When the cooking time has elapsed an acoustic signal sounds and the cooking process is switched off.

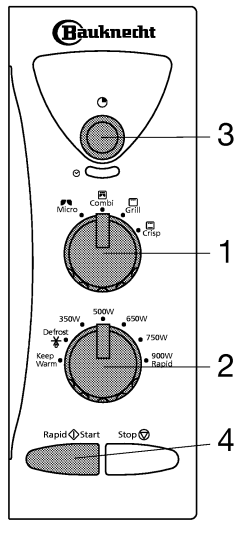

Note:
Once the cooking process has been started the time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Timer knob to increase or decrease the time.

Note:
Both Time, Power and function are possible to change during cooking.
After using the high timestep resolution, the oven automatically switches back to the lower timestep setting (factory setting) if a new cooking time has not been set within 30 seconds. To determine which timestep is in use, see the dots in the middle of the display. When the upper dot is lit - the high timestep is active. When the lower dot is lit - the lower timestep is active.

Defrost function

Follow the procedure for "Time and Power" and choose ✳ 160 W when defrosting.

When softening ice-cream or butter you should choose 90 W.

Check and inspect the food regularly. Experience will give you the times needed for various amounts.

How to choose power level?

Rapid / 900 W
– Fast reheat of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W
– To be used for cooking of vegetables, fish, meat etc.
650 W
– To be used when cooking dishes not possible to stir.
500 W
– To be used when more careful cooking is required e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W
– To be used when simmering stews.
Defrost ✳ /160 W
– To be used for defrosting.
KEEP WARM / 90 W
– To be used for softening butter, cheese and ice cream.

Grill function

The Grill which is placed in the ceiling of the oven compartment, will quickly give a nice brown surface to the food.
For best results reposition food and turn over half way through cooking.
Do not leave the oven door open for long periods when the Grill is in operation as the temperature will drop.

Important!
Ensure that the utensils you use are heat resistant and oven proof before grilling with them. Plastics, paper, or wood are not recommended.
Do not use plastic utensils when grilling. They will melt.

Always place the Grill-grid on the Glass Turn-table to collect the dripping juices.

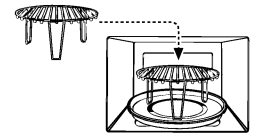

User action	Oven reaction
1. Turn the MULTIFUNCTION knob to select the Grill function.	 * The oven switches to cooking time mode.
2. Turn the TIMER knob until the required time is indicated.	 * The cooking time is displayed.
3. Press the START button.	 * The cooking time is displayed counting down.
	When the cooking time has elapsed an acoustic signal sounds and the cooking process is switched off.

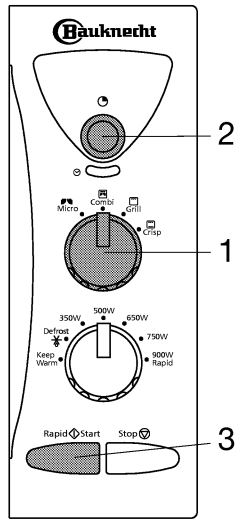

Note:
Once the cooking process has been started the time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Timer knob to increase or decrease the time.

Note:
Both Time, Power and Function are possible to change during cooking.
Turning the Multifunction knob during cooking switches the selected function off and starts the new function immediately. The timer will continue to count down regardless of selected function.